

Installation Guide

Rigid Vertical Blinds


Fitting the brackets

There are two types of brackets for vertical blinds, each of which offers a different method of installation:



Top-Fixing

Use the single hole in the top of the bracket to fix to the lintel (the 'ceiling' of the recess).

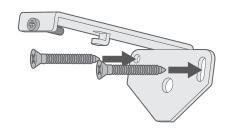


Face-Fixing

Use two screws through the back plate to mount onto a facing surface (a wall or window frame).



Note that the position of the outermost brackets should be at least 5cm away from the ends of the rail, with any other brackets evenly distributed across the width.

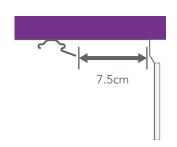

If you're using top-fix brackets, make sure that you mount them at least 7.5cm in front of either the window frame, or any protruding vents or handles, if there are any. This allows space for the louvres to turn open and closed.

Fitting the blind

Face-Fixing

Top-Fixing


Situate the front lip of the headrail into the front of the bracket.


the back of the rail into the bracket.





Lift the front of the headrail so it's level, then tighten the screw in the front of the bracket to secure the rail in place.

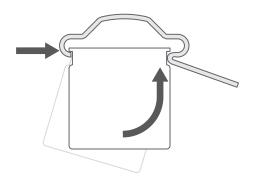

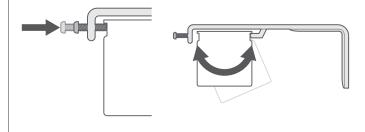




Installation Guide

Rigid Vertical Blinds

Hanging the louvres





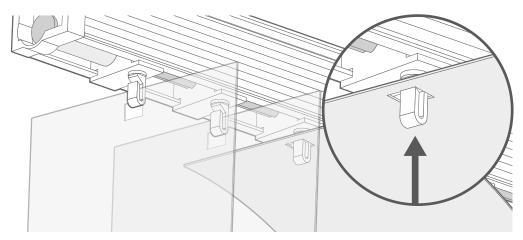

To hook the louvres onto the rail, simply hold upeach louvre and feed the square hole in the top over the hooks in the rail, then allow the louvre to straighten and hang.

Hook the control wand onto the eyelet at the end of the hooks.



